







# IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY.

## WARNING

WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, INJURY TO PERSONS, AND HYPERTHERMIA, INCLUDING THE FOLLOWING TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, INJURY, AND HYPERTHERMIA, READ ALL THESE INSTRUCTIONS BEFORE USE.

1. Read all instructions before use.
  2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature. Unplug or disconnect the appliance from the power supply before servicing.
  3. **DO NOT** operate any appliance with a damaged cord or plug. Discard appliance or return to an authorized service facility for examination and/or repair.
  4. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Keep cord away from high traffic areas and place cord where it will not be tripped over.
  5. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
  6. This appliance is not intended for use by anyone (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  7. Children should be supervised to ensure that they **DO NOT** play with the appliance.
  8. Cleaning and user maintenance shall not be made by children without supervision.
  9. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
  10. **DO NOT** handle plug or appliance with wet hands.
  11. **DO NOT** use without filter in place.
  12. Only use Shark® branded filters and accessories.
  13. **DO NOT** damage the power cord:
    - a) **DO NOT** pull or carry appliance by the cord or use the cord as a handle.
    - b) **DO NOT** unplug by pulling on cord. Grasp the plug, not the cord.
    - c) **DO NOT** stand the appliance on the power cord, close a door on the cord, pull the cord around sharp corners, or leave the cord near heated surfaces.
  14. **DO NOT** use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
  15. **DO NOT** use if airflow is restricted. If the air paths become blocked, turn the appliance off and unplug from electrical outlet. Remove all obstructions before you plug in and turn on the unit again.
  16. **DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
  17. **DO NOT** place appliance on unstable surfaces such as chairs or other furniture.
  18. **DO NOT** use in the following areas:
    - a) Wet or damp surfaces
    - b) Outdoor areas
    - c) Spaces that are enclosed and may contain explosive or toxic fumes or vapors (lighter fluid, gasoline, kerosene, paint, paint thinners, mothproofing substances, or flammable dust)
  19. Turn off all controls before unplugging the appliance.
  20. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
  21. Hand wash with soapy water only. Washing with cleaning chemicals could damage the unit.
  22. Make sure filter is in place after routine maintenance.
  23. Not suitable for use with solid-state speed controls.
-  **BATTERY REMOVAL AND DISPOSAL**
- This remote control uses an AAA battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.
-  **IMPORTANT INSTRUCTIONS**
24. This heater is hot when in use. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
  25. Extreme caution is necessary when any heater is used by or near children or a disabled person and whenever the heater is left operating and unattended.
  26. Always unplug heater when not in use.
  27. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
  28. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock or fire, or damage the heater.
  29. To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
  30. A heater has hot and arcing or sparking parts inside. **DO NOT** use it in areas where gasoline, paint, or flammable liquids are used or stored.
  31. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
  32. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
  33. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.  
To avoid excessive room temperatures which can cause hyperthermia, **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
-  **CAUTION** – High temperature. Keep electrical cords, drapery, and other furnishings at least 3 feet (0.9 m) from the front of the heater and away from the side and rear.
-  **WARNING** – Risk of hyperthermia.
-  **CAUTION: Risk of fire - DO NOT** operate without base attached.
-  **POWER SUPPLY SAFETY**
1. Read and follow all instructions that are on the product or provided with the product.
  2. **DO NOT** use an extension cord.
  3. **DO NOT** use within 10 feet of a pool and **DO NOT** use in a bathroom.
-  **FCC WARNINGS**
- Note:** This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
To see if this equipment interferes with radio or television reception, try turning the equipment off and on. To correct any interference:
- Reorient or relocate the receiving antenna.
  - Increase the distance between the equipment and the receiver.
  - Connect the equipment to a different outlet than the receiver.
  - Consult the dealer or an experienced technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and any part of your body.
- This equipment complies with ICSED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and any part of your body.
- This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:
1. This device may not cause harmful interference, and
  2. this device must accept any interference received, including interference that may cause undesired operation.
- Caution:** Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- IC statement:**
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
  2. This device must accept any interference, including interference that may cause undesired operation of the device.
-  **WARNING: DO NOT COVER**
-  **WARNING: HOT SURFACE**

## READ AND SAVE THESE INSTRUCTIONS


© 2025 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC.

BREEZEBOOST and THERMO IQ MODE are trademarks of SharkNinja Operating LLC.

TH202\_TH202WH\_QSG\_REV\_Mv3

Please be sure to read and save the warnings on other side prior to using your unit.

# QUICK START GUIDE

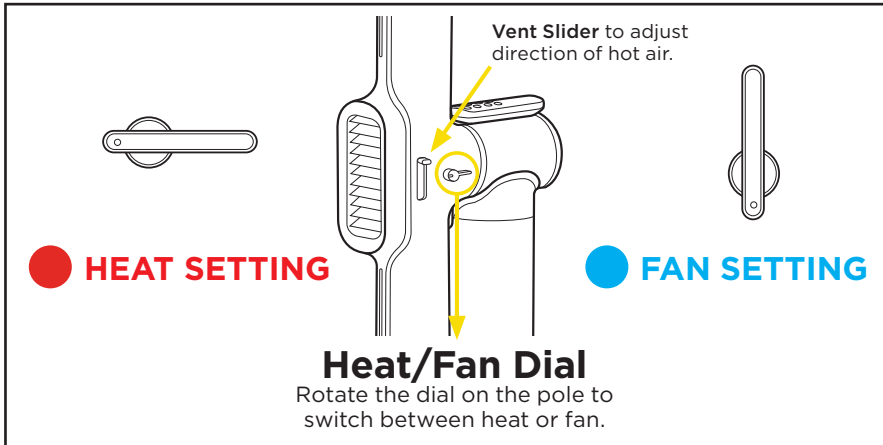

visit [qr.sharkclean.com/TH200series](http://qr.sharkclean.com/TH200series) or

**SCAN HERE**



**USING YOUR SMARTPHONE CAMERA FOR FULL INSTRUCTIONS OR TO PURCHASE REPLACEMENT PARTS.**

## ON-UNIT DISPLAY



- (A) BRIGHTNESS**  
Press to adjust the brightness of the display panel. Choose between 4 levels of brightness.
- (B) POWER**  
Press to power unit on or off. It may take a moment for the unit to cool down after the heat has been turned off.
- (C) OSCILLATION**  
Press the oscillation button to cycle through oscillation range options. Setting 1 is 45 degrees, setting 2 is 90 degrees, and setting 3 is 180 degrees.
- (F) FAN / THERMO IQ ARROWS**  
When in Fan mode, press arrows to adjust fan speed up or down. When in Heat mode, press the arrows to adjust the thermostat temperature.

## REMOTE

### FAN FUNCTIONS



- (F) SPEED ADJUST**  
Press up and down arrows to scroll between fan speeds 1-10.
- (G) FAN MODES**  
Press to cycle between Sleep, BreezeBoost™, and Natural Breeze settings.
  - Sleep mode:** Mute chimes, dim lights, and switch to an ideal fan speed for sleep.
  - BreezeBoost™:** For a powerful burst of airflow.
  - Natural Breeze:** Varying airflow patterns to simulate natural wind.

### HEAT FUNCTIONS

- (F) THERMO IQ MODE™**  
Press up and down arrows to set desired temperature. The heater will automatically adjust based on your selection.
- (G) HEAT MODES *remote only***  
Press the mode button to cycle between Defrost and Room settings. *Note: some models have High and Low versions.*
  - Comfort:** Soothing warmth for sustained use.
  - Focus:** Powerful, directed heating.


### SHARED FUNCTIONS

- (C) OSCILLATION**  
Press the oscillation button to cycle through oscillation range options. Setting 1 is 45 degrees, setting 2 is 90 degrees, and setting 3 is 180 degrees.
- (D) TIMER**  
Press the timer button to cycle through timer settings. Automatically turns off power after 1, 2, 4, or 8 hours.
- (C) + (D) MUTE CHIME**  
Press and hold oscillation and timer buttons for 5 seconds to mute chimes. Repeat to re-enable.
- (E) ANGLE ADJUST**  
Press the left and right arrows to slightly adjust the direction of fan.

## PRODUCT TIPS

**PIVOT AND TILT:** Manually adjust the fan blade's orientation (1) and tilt (2) to personalize your airflow.

**NOTE:** The blade only rotates counterclockwise up to 90 degrees.

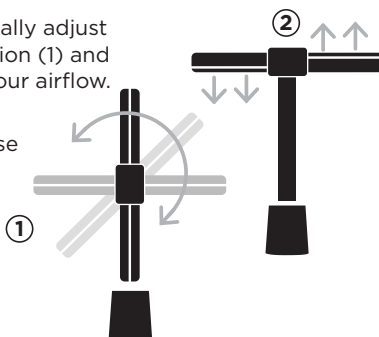

**DUST DEFENSE** Panel on the rear of the unit collects the dust to make cleaning easier. Recommended to clean every 6 months or as needed.



**CARRYING POSITION:**

Carry the unit by the handle on the base while supporting the air duct.

